VAC Pro

USER MANUAL



Getting Started

Congratulations on your purchase of the 64 audio VAC Pro! Before using the vacuum, please take a few moments to read this entire manual and observe all of the safety instructions detailed on the next page. Retain this document for future reference and for more information about 64 Audio and our products please visit www.64audio.com.



Vacuum Power: 20 inHg Casing: Anodized aluminum

Runtime: Up to 80 minutes Weight: 3.7 Ounces
Charge Time: 90 Minutes to full battery Dimensions: 1 x 5.1 Inches

Important Safety Instructions

- Use only as described in this manual.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle charger, including charger plug, and charger terminals with wet hands.
- Keep hair, loose clothing, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without filters in place.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- To protect against risk of electrical shock, do

not put unit or charging base in water or other liquids.


- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The unit should be placed or mounted away from sinks and hot surfaces.
- Unplug the charger from outlet before any routine cleaning or maintenance.
- Do not look into the air vents when the unit is switched on, as sometimes there is a possibility of small debris being discharged from the air vents, especially after cleaning/replacement of the filters as debris inside the unit can be disturbed.
- Do not leave appliance running unattended, especially when powered with a cord.
- DO NOT use this device for cleaning or removing debris from a human ear. Consult an authorized professional if you require any ear related health care.

Accessories

The Vac Pro comes with a wide variety of attachments engineered for different use cases.





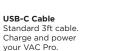



Filter Discard used filters and replace them.

O-Rings Discard used 0-rings and replace them.

Large Pin

Used for cleaning the Orange Steel Tip needle.



Small Pin

Used for cleaning the Pink Steel Tip needle.



Orange Steel Tip Standard when cleaning large single bore iems.



Green Plastic TipDesigned to deep
clean larger sized
flexible tubes.



Pink Plastic Tip
Designed to deep
clean smaller sized
flexible tubes.




Pink Steel Tip Short and ridgid, best for shallow clogged tubes.



Tapered TipA versatile option, great for iems and hearing aids.

Battery And Charging

It's important to fully charge the VAC Pro before using it for the very first time. In the event the battery is low and continued use is required, the vac is able to continue fucntioning while charging with a cable.

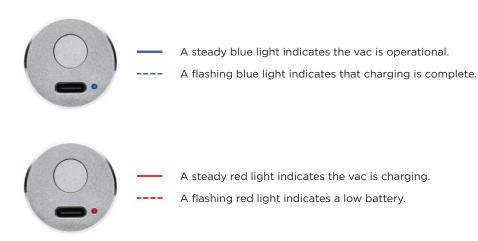

Maintenance

It's important to maintain and clean the vac regularly to ensure optimal performance. Improper care can lead to filter clogging and may potentially cause further damage to the vac.


Step 1. Remove the aluminum cap from the vac.

Step 2. Remove old filters (and o-rings if needed) and clean area if necessary.

Step 3. Insert the new filter and o-rings, and close the cap onto the vac.

If a steel syringe tip ever becomes clogged, insert the appropriate sized pin to clean the syringe tip thoroughly.



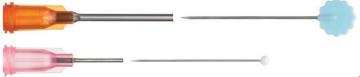



AUDIO'

Rights Reserved.